MaxLite[®] Ground Stake

General Safety Information

WARNING - Installation should comply with local and national electrical codes.

Models: GROUNDSTAKE

Installation Instructions

- **1.** Excavate for conduit lines and ground stake. Consider climate, local water drainage flow and snow accumulation when determining stake height above the ground surface.
- 2. Assemble stabilizer grid and secure it to the stake with supplied screws. (Fig. 1)
- 3. Position stake in hole, pull conduit wires inside hollow stake and add rocks or gravel for stability.
- 4. Screw fixture into cap, make your electrical connections and properly ground the fixture. Use retaining screw to secure cap onto the top of the stake. (Fig. 2)



Installation Instructions (With Junction Box)

- **1.** Excavate for conduit lines and ground stake. Consider climate, local water drainage flow and snow accumulation when determining stake height above the ground surface.
- 2. Assemble stabilizer grid and secure it to the stake with supplied screws. (Fig. 1)
- 3. Position stake in hole, pull conduit wires inside hollow stake and add rocks or gravel for stability.
- 4. Secure cap to bottom of junction box with the gasket inbetween them. Use the hollow connector screw and bolt to tighten and provide compression on the gasket to ensure weatherproof seal. (Fig. 2)
- Feed supply wires through the cap into junction box. Thread fixture into junction box cover and make your electrical connections making sure to properly ground the fixture.
 Note: If desired add photocell at this step using one of the additional knockouts on the junction box cover.
- 6. Use provided screws to secure junction box cover to junction box with the gasket inbetween.
- 7. Secure junction box to the top of the ground stake. (Fig. 3)

Fig. 1

Page: 1 REV: 07/30/20

MaxLite

Picture is for illustration purposes only. Your model may vary.







MaxLite

MaxLite[®] Ground Stake

Warranty Information

MaxLite Inc. warrants its products for a minimum period of **FIVE (5)** years from the date of original purchase from MaxLite or its authorized distributor/dealer (the "Warranty Period"), as follows: If a Product fails to operate during the Warranty Period as a result of defects in materials or workmanship, MaxLite will, at its option, repair it, replace it with the same or like Product.

Please refer to Maxlite's website (at http://maxlite.com/resources/warranties) for the complete terms and conditions of our warranty.

Limitation of Liability

THE FOREGOING WARRANTY IS EXCLUSIVE, AND IS THE SOLE REMEDY FOR ANY AND ALL CLAIMS, WHETHER IN CONTRACT, IN TORT OR OTHERWISE ARISING FROM THE FAILURE OF PRODUCT AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED TO THE EXTENT PERMITTED BY LAW AND, IN ANY EVENT, SHALL BE LIMITED TO THE WARRANTY PERIOD SPECIFIED ABOVE. THE LIABILITY OF MAXLITE SHALL BE LIMITED TO THE TERMS OF THE EXPRESS WARRANTY SET FORTH HEREIN. IN NO EVENT WILL MAXLITE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES RESULTING FROM LOSS OF USE, PROFITS, BUSINESS OR GOODWILL, LABOR COSTS, REMOVAL OR INSTALLATION COSTS, DECREASE IN THE LIGHT OUTPUT OF THE LAMP, AND/OR DETERIORATION IN THE LAMP'S PERFORMANCE, WHETHER OR NOT MAXLITE HAS BEEN ADVISED OF THE POSSIBILITY THEREOF. UNDER NO CIRCUMSTANCES SHALL MAXLITE'S ENTIRE LIABILITY FOR A DEFECTIVE PRODUCT EXCEED THE PURCHASE PRICE OF THAT PRODUCT. WARRANTY SERVICES PROVIDED UNDER THESE TERMS AND CONDITIONS DO NOT ENSURE THE UNINTERRUPTED OPERATION OF PRODUCTS; MAXLITE SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY ANY DELAYS INVOLVING WARRANTY SERVICE.

This Limited Warranty gives you specific legal rights and you may also have other rights that may vary from state to state. Because some states or jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, this limitation may not apply to you.