

# PRODUCT DATA SHEET

# **EZ TRAP® EZT226**

3/4" Compact Slip Inlet Overflow Switch

### A CSW Industrials Company

## **Description**


3/4" Compact Slip Inlet Overflow Switch.

### **Packaging**

| Code  | Description | Qty per Case | Lbs per Case | Cubic Feet |
|-------|-------------|--------------|--------------|------------|
| 83226 | EZT226      | 10           | 5.0          | .34        |

### **Important Notes:**

Install in accordance with RectorSeal® instructions as well as all applicable local plumbing, drainage and electrical codes.

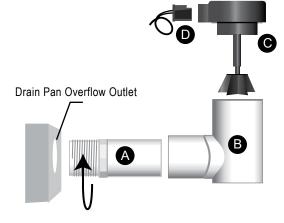

# **Overflow Switch Assembly Instructions**

- 1. Screw Adaptor (A) into 3/4" drain pan overflow outlet.
- 2. Glue Street Ell (B) to Adaptor (A).
- 3. Press fit Float Switch Assembly (C) into 1" opening at top of Street Ell (B). DO NOT USE GLUE. Check that Actuator Arm and Float moves freely inside Ell.
- 4. Press plug end of Modular Cable (D) into Float Switch Assembly (C).
- 5. Attach service & cleaning labels as indicated.

**Note:** Insulation is required when trap is installed in unconditioned space where sweating can occur.



# **Applications**

Two part design for use where obstructions prevent direct threading.

### **Characteristics | Features**


- Easy to install and maintain
- Float switch overflow protection
- 4 Amp, 24 Volt



### **Kit Contents**

- (A) 3/4"Adaptor (1)
- (B) 1" x 3/4" Slip Female Street Ell (1)
- (C) Float Switch Assembly (1)
- (D) 72" Modular Cable (1)
- Red/Blue Service Label (1)

3/4" Compact Slip Inlet Overflow Switch

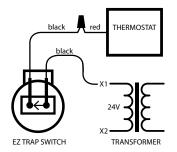

**Note:** Wiring diagram shown cuts power to thermostat when float switch operates to stop operation of the A/C unit. To inhibit mold growth during long absences, connect terminals into yellow cooling circuit so when float switch operates, condenser will switch off but fan will continue running.

### **Wiring Instructions**

- 1. Turn off electrical power at main panel before installing EZ Trap switch.
- 2. An in-line fuse is necessary to protect the 24V circuit.
- 3. Connect Float Switch using wiring diagram. (above)
- 4. Test system for proper operation by lifting float.

# **Operating Procedure**

Should blockage occur in the condensate drain line, the float will lift to stop operation.

### **Limited Warranty**



For more information on our product limited warranty, visit RectorSeal.com



24 VAC Class 2, 4A Max. GP, Type 1, Suitable for use in Air Handling Spaces

Manufactured by

### RectorSeal, LLC

2601 Spenwick Drive • Houston, TX 77055, USA • 800-231-3345 • Fax 800-441-0051 • rectorseal.com 3255 Wyandotte St. East • Windsor, ON N8Y 1E9, Canada • 519-966-4901

A CSW Industrials Company. RectorSeal, the logos and other trademarks are property of RectorSeal, LLC, its affiliates or its licensors and are protected by copyright, trademark and other intellectual property laws, and may not be used without permission. RectorSeal reserves the right to change specifications without prior notice. ©2023 RectorSeal. All rights reserved. R50706-0623